


# Design Information

Document No:  
5-01-102-0

## How to measure lengths

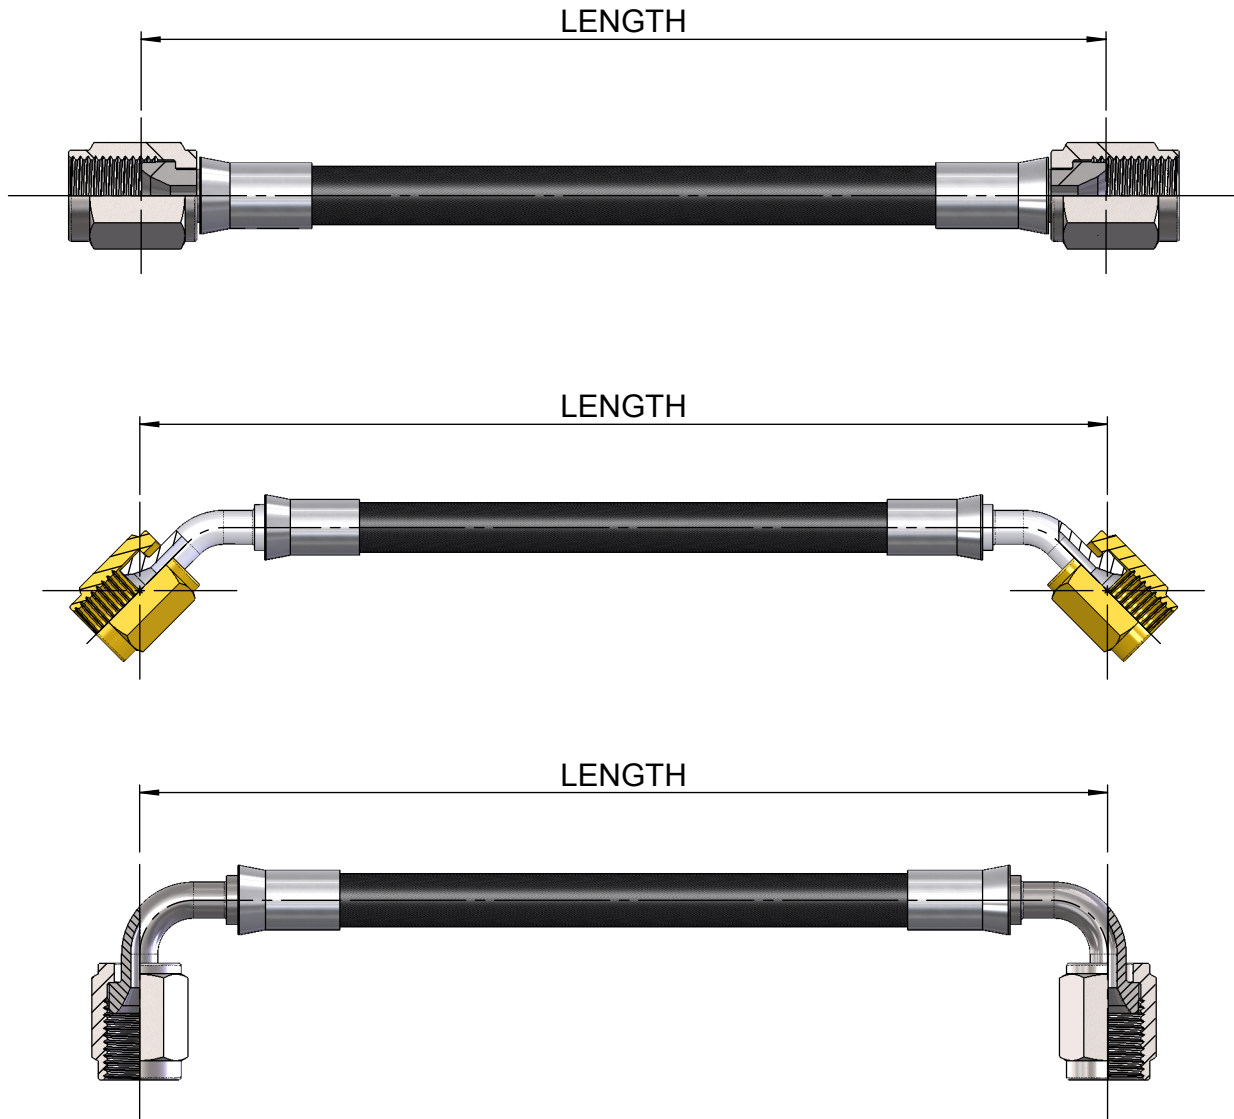

HOSES ARE MEASURED FROM CENTRE TO CENTRE, THE CENTRE POINT BEING THE FRONT FACE OF THE SEAT

UNLESS SPECIFIED, STANDARD AEROSPACE TOLERANCES WILL BE USED:

ASSEMBLY LENGTH UP TO 460mm	= ± 3mm
ASSEMBLY LENGTH 461mm TO 915mm	= ± 6mm
ASSEMBLY LENGTH 916mm TO 1270mm	= ± 12mm
ASSEMBLY LENGTH OVER 1271mm	= ± 1%

ALL ASSEMBLIES HAVE IDENT LABELS ON THE HOSES OR COLLARS, AS REQUIRED.

**FHS**  
MOTOR RACING

656 Ajax Avenue, Slough, Berkshire, SL1 4BH

Tel: +44 (0)1753 513080 Fax: +44 (0)1753 513099

www.fhsracing.co.uk e-mail: info@fhsracing.co.uk

This Data is confidential and is supplied on the express condition that it shall not be lent, copied or disclosed to any other person or used for any other purpose without the written consent of FHS Motor Racing Ltd.

© FHS Motor Racing Ltd 2010, Design rights under Copyright, Designs & Patents Act 1988 reserved.